

User's Manual

Multifunction Transducer MT440

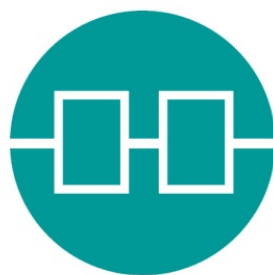
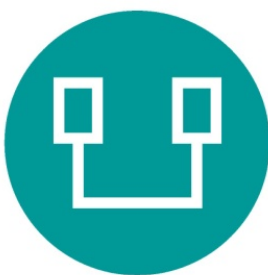


Table of Contents

| | |
|--|----|
| 1. SECURITY ADVICE AND WARNINGS | 1 |
| 1.1 Welcome | 2 |
| 1.2 Introduction | 2 |
| 1.3 Health and safety | 2 |
| 1.4 Safety warnings and instructions for use | 2 |
| 1.5 Warnings, information and notes regarding designation of the product | 3 |
| 2. BASIC DESCRIPTION AND OPERATION OF MEASURING TRANSDUCER | 4 |
| 2.1 Introduction | 5 |
| 2.2 Glossary | 6 |
| 2.3 Description of the product | 6 |
| 2.4 Purpose and use of measuring transducer | 8 |
| 3. CONNECTION | 9 |
| 3.1 Introduction | 10 |
| 3.2 Mounting | 10 |
| 3.3 Electric connection | 10 |
| 3.4 Connection of input/output modules | 12 |
| 3.5 Communication connection | 12 |
| 3.6 Connection of auxiliary power supply | 14 |
| 4. SETTINGS | 15 |
| 4.1 Introduction | 16 |
| 4.2 MiQen software | 16 |
| 4.3 Setting procedure | 17 |
| 4.4 General settings | 17 |
| 4.5 Connection | 19 |
| 4.6 Communication | 20 |
| 4.7 Security | 20 |
| 4.8 Energy | 21 |
| 4.9 Inputs and outputs | 21 |
| 4.10 Alarms | 25 |
| 4.11 Reset operations | 25 |
| 5. MEASUREMENTS | 26 |
| 5.1 Introduction | 27 |
| 5.2 Supported measurements | 27 |
| 5.3 Available connections | 27 |
| 5.4 Explanation of basic concepts | 29 |
| 5.5 Calculation and display of measurements | 30 |
| 5.6 Present values | 30 |

- 6. *TECHNICAL DATA* 32
 - 6.1 *Applied standards* -----33
 - 6.2 *Accuracy*-----34
 - 6.3 *Inputs* -----35
 - 6.4 *Connection* -----35
 - 6.5 *I/O modules* -----36
 - 6.6 *Communication*-----37
 - 6.7 *Electronic features* -----37
 - 6.8 *Safety features* -----37
 - 6.9 *Mechanical*-----38
 - 6.10 *Environmental conditions* -----38
 - 6.11 *Dimensions* -----38

- 7. *APPENDIX A: MODBUS PROTOCOL* 40
 - 7.1 *Modbus communication protocol* -----41

- 8. *APPENDIX B: CALCULATIONS & EQUATIONS* 51
 - 8.1 *Calculations*-----52
 - 8.2 *Equations*-----53


1. SECURITY ADVICE AND WARNINGS

| | |
|---|---|
| <i>1.1 Welcome</i> | 2 |
| <i>1.2 Introduction</i> | 2 |
| <i>1.3 Health and safety</i> | 2 |
| <i>1.4 Safety warnings and instructions for use</i> | 2 |
| <i>1.5 Warnings, information and notes regarding designation of the product</i> | 3 |

1.1 Welcome

Please read this chapter carefully before starting work with a measuring transducer.

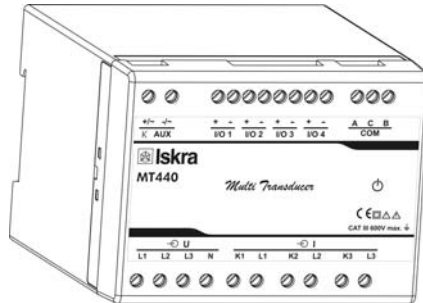This chapter deals with important information and warnings that should be considered for safe handling with a measuring transducer.



1.2 Introduction

This booklet contains instructions for installation and use of measuring transducer MT440. Installation and use of a device also includes handling with dangerous currents and voltages and shall be therefore carried out by qualified persons. The Iskra MIS Company assumes no responsibility in connection with installation and use of the product. If there is any doubt regarding installation and use of the system in which the instrument is used for measuring or supervision, please contact a person who is responsible for installation of such system.

1.3 Health and safety

The purpose of this chapter is to provide a user with information concerning safe installation and handling with the product in order to assure its correct use and continuous operation.

It is essential that everyone using the product is familiar with the contents of chapter »Security Advices and Warnings«.

If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

1.4 Safety warnings and instructions for use

Check the following before switching on the device:

- Nominal voltage,
- Proper connection of auxiliary supply,
- Nominal frequency,
- Voltage ratio and phase sequence,
- Current transformer ratio and terminals integrity,
- Protection fuse - recommended maximal external fuse size is 6 A,
- Proper connection of I/O modules.

Important: A current transformer secondary should be short circuited before connecting the transducer.






Important: See *Chapter 3.3 Electric connection* for safety warnings regarding connection.

Waste

It is forbidden to deposit electrical and electronic equipment as municipal waste. The manufacturer or provider shall take waste electrical and electronic equipment free of charge. The complete procedure after lifetime should comply with the Directive 2002/96/EC about restriction on the use of certain hazardous substances in electrical and electronic equipment.

1.5 Warnings, information and notes regarding designation of the product

Used symbols:

| | |
|--|--|
|  | See product documentation. |
|  | Double insulation in compliance with the SIST EN 61010-1 standard. |
|  | Functional ground potential. Note: This symbol is also used for marking a terminal for protective ground potential if it is used as a part of connection terminal or auxiliary supply terminals. |
|  | Compliance of the product with directive 2002/96/EC, as first priority, the prevention of waste electrical and electronic equipment (WEEE), and in addition, the reuse, recycling and other forms of recovery of such wastes so as to reduce the disposal of waste. It also seeks to improve the environmental performance of all operators involved in the life cycle of electrical and electronic equipment. |
|  | Compliance of the product with European CE directives. |

Contents of consignment

The consignment includes:

- Measuring transducer MT440,
- label for I/O functionality description,
- quick guide.

2. BASIC DESCRIPTION AND OPERATION OF MEASURING TRANSDUCER

2.1 Introduction ----- 5
2.2 Glossary ----- 6
2.3 Description of the product ----- 6
2.4 Purpose and use of measuring transducer----- 7


2.1 Introduction

Description of symbols

In different chapters or tables different symbols may appear in User's Manual. According to the position of symbols, they have different meaning.

Subchapter

Symbols next to the subchapters indicate accessibility of functions described. Accessibility of functions is indicated with the following symbols:

 – Function accessible via communication (MiQen software)

Tables

Supported functions and measurements are listed in tables. Symbols in tables indicate support of enabled functions. Additionally a legend is placed below table of used symbols. Meaning of symbols is:

- – Function is supported
- × – Function is not supported
- – Symbol meaning varies and is described in the legend below the table

User information



For unknown technical terms please refer to Glossary on the next page.

2.2 Glossary

| Term | Explanation |
|--|---|
| RMS | Root Mean Square value |
| MODBUS | Industrial protocol for data transmission |
| MiQen | Software for Iskra MIS instruments |
| AC | Alternating voltage |
| PA total | Angle calculated from total active and apparent power |
| PA1, PA2, PA3 | Angle between fundamental phase voltage and phase current |
| PF | Power factor |
| THD | Total harmonic distortion |
| MD | Measurement of average values in time interval |
| Hand-over place | Connection spot of consumer installation in public network |
| M_v – Sample factor | Defines a number of periods for measuring calculation on the basis of measured frequency |
| M_p – Average interval | Defines frequency of refreshing displayed measurements on the basis of a Sample factor |
| Hysteresis expressed as percentage [%] | Percentage specifies increase or decrease of a measurement from a certain limit after exceeding it. |
| PO | Pulse output module |
| AL | Alarm output module |
| AO | Analog output module |
| FAO | Fast analog output module |
| DO | Digital output module |

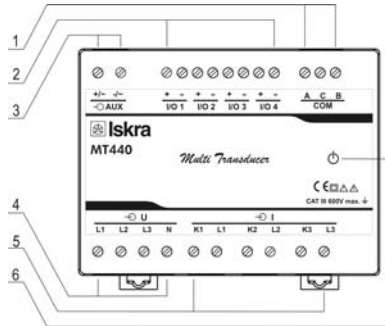
2.3 Description of the product

Measuring transducer is intended for measuring, analyzing and monitoring single-phase or three-phase electrical power network. It measures RMS value by means of fast sampling of voltage and current signals, which makes instrument suitable for acquisition of transient events. A built-in microcontroller calculates measurements (voltage, current, frequency, energy, power, power factor, THD phase angles, etc.) from the measured signals.

Appearance

Measuring transducer can differ from yours depending on the type and functionality.

- 1 – Communication ports
- 2 – I/O modules
- 3 – Auxiliary supply
- 4 – Voltage inputs
- 5 – Current inputs
- 6 – Power ON LED




Communication ports and LED indicators

Serial communication can be connected by using screw-in connector (RS232 or RS485). USB can be connected through USB-mini type connector at the bottom of transducer.

LED indicator is intended for POWER ON signaling (red LED).

Warning!



USB communication port is provided with only BASIC insulation and can ONLY be used unconnected to aux. supply AND power inputs!

I/O modules

Four I/O module slots are intended for various I/O modules, which should be chosen at placing the order. Analog outputs, fast analog outputs, relay outputs (alarm, pulse, general-purpose digital outputs) and solid-state relay outputs (alarm, pulse, general-purpose digital outputs).

Universal auxiliary supply

Auxiliary supply is connected by two screw-in connectors. For safety purposes it is important that all wires are firmly fastened. Auxiliary supply is wide range ($24 V_{DC} - 300 V_{DC}$; $40 V_{AC} - 276 V_{AC}$).

Voltage inputs

Each voltage input is connected to measuring circuit through input resistor chain ($3.3 M\Omega$ per phase). Maximum value of input voltage is $600 V_{L-N}$ ($1000 V_{L-L}$).

Current inputs

Each current input is connected to measuring circuit through current transformer (0.01Ω per phase). Maximum allowed thermal value of input current is 15A (cont.).

2.4 Purpose and use of measuring transducer

The instrument is used for monitoring and measuring electric quantities of three-phase electrical power distribution system. The meter is provided with 32 program adjustable alarms, up to four different modules and communication. With the RS232/RS485 and USB communication, the meter can be set and measurements can be checked. The meter also functions as an energy counter (up to four energy counters), with the additional function of cost management by tariffs.

Supported measurements

| | Basic measurements |
|-----------------------|--|
| Phase | Voltage U_1, U_2, U_3 and U^{\sim} |
| | Current I_1, I_2, I_3, I_n, I_t and I_a |
| | Active power P_1, P_2, P_3 , and P_t |
| | Reactive power Q_1, Q_2, Q_3 , and Q_t |
| | Apparent power S_1, S_2, S_3 , and S_t |
| | Power factor PF_1, PF_2, PF_3 and PF^{\sim} |
| | Power angle $\varphi_1, \varphi_2, \varphi_3$ and φ^{\sim} |
| | THD of phase voltage U_{f1}, U_{f2} and U_{f3} |
| | THD of power angle I_1, I_2 and I_3 |
| Phase-to-phase | Phase-to-phase voltage U_{12}, U_{23}, U_{31} |
| | Average phase-to-phase voltage U_{ff} |
| | Phase-to-phase angle $\varphi_{12}, \varphi_{23}, \varphi_{31}$ |
| | THD of phase-to-phase voltage |
| Energy | Counter 1 |
| | Counter 2 |
| | Counter 3 |
| | Counter 4 |
| | Active tariff |
| | Other measurements |
| MD values | Phase current I_1, I_2, I_3 |
| | Active power P (Positive) |
| | Active power P (Negative) |
| | Reactive power Q – L |
| | Reactive power Q – C |
| | Apparent power S |
| | Other measurements |
| Measurements | Frequency |
| | Internal temperature |

3. CONNECTION

| | |
|---|-----------|
| <i>3.1 Introduction</i> | <i>10</i> |
| <i>3.2 Mounting</i> | <i>10</i> |
| <i>3.3 Electric connection</i> | <i>10</i> |
| <i>3.4 Connection of input/output modules</i> | <i>12</i> |
| <i>3.5 Communication connection</i> | <i>12</i> |
| <i>3.6 Connection of auxiliary power supply</i> | <i>14</i> |


3.1 Introduction

This chapter deals with the instructions for measuring transducer connection. Both the use and connection of the device includes handling with dangerous currents and voltages. Only a qualified person shall therefore perform connection. Iskra MIS does not take any responsibility regarding the use and connection. If any doubt occurs regarding connection and use in the system, which device is intended for, please contact a person who is responsible for such installations.

Before use: Check voltages and phase rotation, supply voltage and nominal frequency.


A circuit breaker with current rating of at least 1A shall be included in close proximity with aux. supply installation as a means of disconnection. It shall be properly marked.

Warning!



Wrong or incomplete connection of supply, measurement or other terminals can cause malfunction or damage the device.

Note



After connection, settings have to be performed via communication (connection mode, current and voltage transformers ratio ...).

3.2 Mounting

MT440 measuring transducer is designed for DIN rail mounting. It should be mounted on a 35 mm DIN rail by means of two plastic fasteners. Before installation fasteners should be in open position (pulled). After device is on place, fasteners are locked (pushed) to close position.

3.3 Electric connection

Voltage inputs of measuring transducer can be connected directly to low-voltage network or via appropriate voltage measuring transformer to medium or high voltage network.

Current inputs of measuring transducer can be connected directly to low-voltage network or via a corresponding current transformer.

Choose connection from the following figures and connect corresponding voltages and currents. Information on electrical characteristics is given in the chapter *Inputs* on page 35.

Warning!



Before using tool for accessing interior or any other part of the transducer which in normal use may be hazardous live (aux. supply and measuring input terminals), transducer **MUST BE ISOLATED OR DISCONNECTED** from hazardous live voltage.

Note




For proper connection wire diameters and other wiring requirements see *Chaper 6.4 Connection*

| System/ connection | Terminal assignment |
|---|---------------------|
| <p>Connection 1b (1W)</p> <p><i>Single-phase connection</i></p> | |
| <p>Connection 3b (1W3)</p> <p><i>Three-phase – three-wire connection with balanced load</i></p> | |
| <p>Connection 3u (2W3)</p> <p><i>Three-phase – three-wire connection with unbalanced load</i></p> | |
| <p>Connection 4b (1W4)</p> <p><i>Three-phase – four-wire connection with balanced load</i></p> | |
| <p>Connection 4u (3W4)</p> <p><i>Three-phase – four-wire connection with unbalanced load</i></p> | |

3.4 Connection of input/output modules

Warning!



Check the module features that are specified on the label, before connecting module contacts. Wrong connection can cause damage or destruction of module and/or device.


Connect module contacts as specified on the label. Examples of labels are given below and describe modules built in the device. Information on electrical properties of modules is given in chapter *Modules* on page 36.

| <table border="1"> <tr><th colspan="2">I/O 1</th></tr> <tr><td>Relay output</td><td>⊕→</td></tr> <tr><td>48 V AC/DC</td><td>+~ 15</td></tr> <tr><td>1000 mA</td><td>-~ 16</td></tr> </table> | I/O 1 | | Relay output | ⊕→ | 48 V AC/DC | +~ 15 | 1000 mA | -~ 16 | <p>Electromechanical relay output module. (Example of alarm module as I/O module 1)</p> |
|---|-------|--|---------------------------|----|------------|-------|-----------|-------|---|
| I/O 1 | | | | | | | | | |
| Relay output | ⊕→ | | | | | | | | |
| 48 V AC/DC | +~ 15 | | | | | | | | |
| 1000 mA | -~ 16 | | | | | | | | |
| <table border="1"> <tr><th colspan="2">I/O 1</th></tr> <tr><td>Solid-state output</td><td>⊕→</td></tr> <tr><td>40 V AC/DC</td><td>+~ 15</td></tr> <tr><td>30 mA</td><td>-~ 16</td></tr> </table> | I/O 1 | | Solid-state output | ⊕→ | 40 V AC/DC | +~ 15 | 30 mA | -~ 16 | <p>Solid state relay module output. (Example of pulse module as I/O module 1)</p> |
| I/O 1 | | | | | | | | | |
| Solid-state output | ⊕→ | | | | | | | | |
| 40 V AC/DC | +~ 15 | | | | | | | | |
| 30 mA | -~ 16 | | | | | | | | |
| <table border="1"> <tr><th colspan="2">I/O 1</th></tr> <tr><td>Analog output</td><td>⊕→</td></tr> <tr><td>0...+20 mA</td><td>+ 15</td></tr> <tr><td>0...+10 V</td><td>- 16</td></tr> </table> | I/O 1 | | Analog output | ⊕→ | 0...+20 mA | + 15 | 0...+10 V | - 16 | <p>Analog output module with analog output, proportional to measured quantities. The outputs may be either short or open-circuited. They are electrically insulated from each other and from all other circuits. (Example of analog output module as I/O module 1)</p> |
| I/O 1 | | | | | | | | | |
| Analog output | ⊕→ | | | | | | | | |
| 0...+20 mA | + 15 | | | | | | | | |
| 0...+10 V | - 16 | | | | | | | | |
| <table border="1"> <tr><th colspan="2">I/O 1</th></tr> <tr><td>Fast analog output</td><td>⊕→</td></tr> <tr><td>0...+20 mA</td><td>+ 15</td></tr> <tr><td>0...+10 V</td><td>- 16</td></tr> </table> | I/O 1 | | Fast analog output | ⊕→ | 0...+20 mA | + 15 | 0...+10 V | - 16 | <p>Fast analog output module with analog output, proportional to measured quantities. The outputs may be either short or open-circuited. They are electrically insulated from each other and from all other circuits. (Example of analog output module as I/O module 1)</p> |
| I/O 1 | | | | | | | | | |
| Fast analog output | ⊕→ | | | | | | | | |
| 0...+20 mA | + 15 | | | | | | | | |
| 0...+10 V | - 16 | | | | | | | | |

3.5 Communication connection

MT440 is equipped with one standard (COM1) serial (RS232 or RS485) communication port and one service communication port (USB).

Warning!




USB communication port is provided with only BASIC insulation and can ONLY be used unconnected to aux. supply AND power inputs!

Connect a communication line by means of corresponding terminals. Connection information is stated on the instrument label. Connector terminals are marked on the label on the upper side of the instrument.

USB connector is positioned on the bottom side of an instrument under removable plastic cover. For driver installation see Note on the next page. Instrument will establish USB connection with PC approx. 3 seconds after physical connection to USB port.

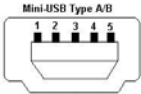More detailed information about communication is given in chapter *Communication* on page 37.

| <table border="1"> <tr><th colspan="2">COM</th></tr> <tr><td>RS232</td><td>Fx 23</td></tr> <tr><td></td><td>↓ 24</td></tr> <tr><td></td><td>Tx 25</td></tr> </table> | COM | | RS232 | Fx 23 | | ↓ 24 | | Tx 25 | COM1 serial communication port (RS232) |
|--|----------------------------------|--|-------|-------|--|-------|--|-------|--|
| COM | | | | | | | | | |
| RS232 | Fx 23 | | | | | | | | |
| | ↓ 24 | | | | | | | | |
| | Tx 25 | | | | | | | | |
| <table border="1"> <tr><th colspan="2">COM</th></tr> <tr><td>RS485</td><td>A 23</td></tr> <tr><td></td><td>NC 24</td></tr> <tr><td></td><td>B 25</td></tr> </table> | COM | | RS485 | A 23 | | NC 24 | | B 25 | COM1 serial communication port (RS485) |
| COM | | | | | | | | | |
| RS485 | A 23 | | | | | | | | |
| | NC 24 | | | | | | | | |
| | B 25 | | | | | | | | |
|  | SERVICE communication port (USB) | | | | | | | | |

RS232

RS232 communication is intended for direct connection of the measuring transducer to the personal computer. It is necessary to provide the corresponding connection of individual terminals of the screw terminal connector (see a table below).

RS485


RS485 communication is intended for connection of devices to network where several instruments with RS485 communication are connected to a common communication interface. We recommend the use of Iskra MIS communication interfaces for best compatibility!

It is necessary to provide the corresponding connection of individual terminals of the screw terminal connector (see a table below).


USB

USB communication serves as a fast peer-to-terminal data link. The instrument is detected by host as a USB 2.0 compatible device. The USB connection is provided through a USB standard Type mini B connector.

Note

| | |
|---|---|
|  | <p>When MT440 is connected to a PC through USB communication for the first time, a user is prompted to install a driver. The driver is automatically installed during MiQen software installation. It is also provided on the CD, enclosed in the original shipment package, or can be downloaded from the Iskra MIS web page www.iskra-mis.si. With this driver installed, USB is redirected to a serial port, which should be selected when using MiQen software.</p> |
|---|---|

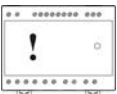Warning!



| | |
|---|---|
|  | <p>Do not remove USB cover permanently!</p> |
|---|---|

The USB port should not remain open. It should be closed immediately after the initial setting through USB port was done and should remain closed during all time of storing & operation. In case the customer has not put the cover on the USB after the initial setting was done, before

putting to store, mounting the unit on the DIN rail or the unit operates without USB cover the warranty is void.


Also unit returned back without USB cover or with clear indications that it was stored or operated without USB cover on the USB port it will be treated as out of the warranty.

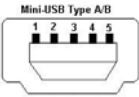Survey of communication connections


| Connector | Terminals | Position | RS232 | RS485 |
|-------------------|---|--|-------|-------|
| SCREW TERMINAL |  | 23 | Rx | A |
| | | 24 | GND | NC |
| | | 25 | Tx | B |
| USB-mini B |  | Standard USB 2.0 compatible cable recommended (Type mini B plug) | | |

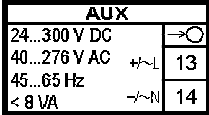3.6 Connection of auxiliary power supply































Measuring transducer has universal (AC/DC) auxiliary power supply. Information on electric consumption is given in chapter *Technical data* on page 32. Auxiliary supply is connected through screw terminal connector.

| | |
|---|---|
|  | Connection of universal power supply to terminals 13 and 14 |
|---|---|

Warning!

| | |
|--|--|
|  | For safety purposes it is important that both wires (Line and Neutral) are firmly connected. |
|--|--|

4. SETTINGS

| | |
|--|----|
| 4.1 Introduction | 15 |
| 4.2 MiQen software | 16 |
| 4.3 Setting procedure | 17 |
| 4.4 General settings | 17 |
| Description and Location  | 17 |
| Average interval  | 18 |
| Temperature unit  | 18 |
| Maximum demand calculation (MD mode)  | 18 |
| Starting current for PF and PA (mA)  | 18 |
| Starting current for all powers (mA)  | 18 |
| Minimum synchronization voltage  | 18 |
| Reactive power and energy calculation  | 19 |
| 4.5 Connection | 19 |
| Connection  | 19 |
| Setting of current and voltage ratios  | 19 |
| Used voltage and current range  | 19 |
| Nominal frequency  | 19 |
| Energy flow direction  | 19 |
| CT connection  | 19 |
| 4.6 Communication | 19 |
| Serial Communication (COM1)  | 20 |
| USB Communication  | 20 |
| 4.7 Security | 20 |
| Password setting  | 20 |
| Password modification  | 20 |
| Password disabling  | 20 |
| 4.8 Energy | 21 |
| Active tariff  | 21 |
| Common energy exponent  | 21 |
| Counter divider  | 21 |
| 4.9 Inputs and outputs | 21 |
| Analog output module  | 21 |
| Fast analog output module  | 23 |
| Solid state output module  | 23 |
| Relay output module  | 23 |
| 4.10 Alarms | 25 |
| Alarms setting | 25 |
| 4.11 Reset operations | 25 |
| Reset energy counters (E1, E2, E3, E4)  | 25 |
| Reset MD values  | 25 |
| Reset the last MD period  | 25 |
| Reset alarm output  | 25 |

4.1 Introduction

Instrument settings can be remotely modified with communication (COM1 and/or USB if available) and MiQen software when connected to a PC.

4.2 MiQen software

MiQen is a software tool for complete monitoring of measuring instruments, connected to a PC via serial or USB communication. A user-friendly interface consists of five segments: devices management, instrument settings, real-time measurements and software upgrading.

Two versions of MiQen software are available:

- Professional edition with full functionality and supports all software functionality. CD-Key is required for the installation.
- Standard edition, freeware edition which supports all software functionality except data analysis.

For MT440 only standard edition applies since measurement recording and analysis is with MT440 not supported.

Devices management

Select the instrument in a favorite's line. Use the network explorer to set and explore the devices network. Communication parameters of all devices and their addresses in network can be easily set.

Instrument settings

Multi Register Edit technology assures a simple modification of settings that are organized in a tree structure. Besides transferring settings into the instrument, storing and reading from the setting files are also available.

Real-time measurements

All supported measurements can be captured in real time in a table form. For further processing of the results of measurements, copying via a clipboard into standard Windows formats is supported.


Software upgrading

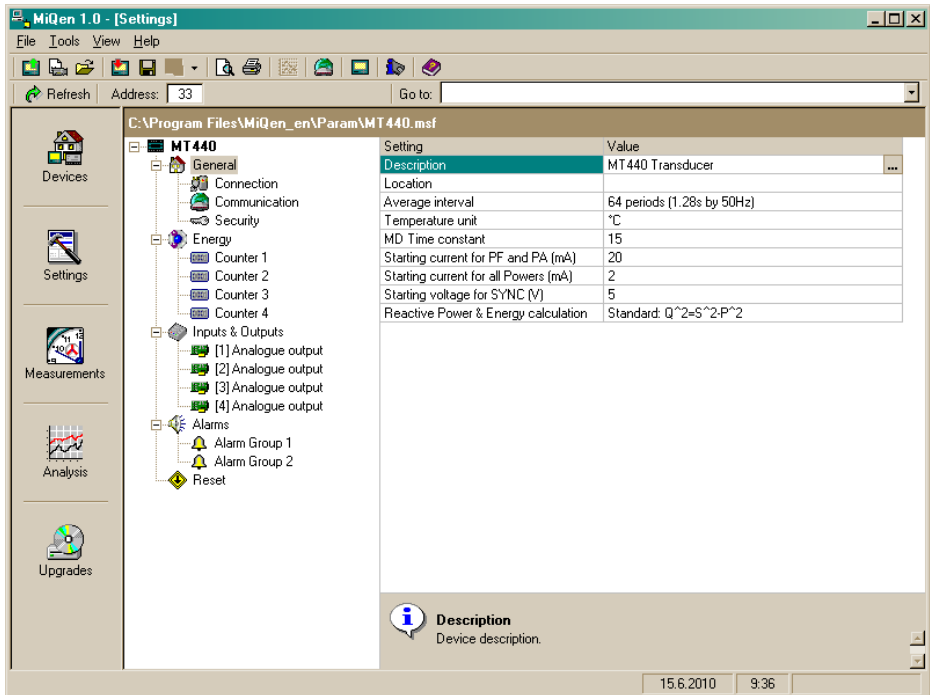
Always use the latest version of software, both MiQen and software in the instrument. The program automatically informs you on available upgrades that can be transferred from the web site and used for upgrading.

Note



More information about MiQen software can be found in MiQen Help system!

MiQen user interface 



Note



You can download freeware MiQen (standard edition) from: www.iskra-mis.si

4.3 Setting procedure

In order to modify instrument settings with MiQen, current parameters must be loaded first. Instrument settings can be acquired via a communication link (serial or USB) or can be loaded off-line from a file on a local disk. Settings are displayed in the MiQen Setting Window - the left part displays a hierarchical tree structure of settings, the right part displays parameter values of the chosen setting group.

4.4 General settings

General settings are essential for measuring transducer. They are divided into four additional sublevels (Connection, Communication, Display and Security).

Description and Location PC

Two parameters that are intended for easier recognition of a certain unit. They are especially used for identification of the device or location on which measurements are performed.

Average interval PC

The averaging interval defines the refresh rate of measurements on communication and remote display.

Temperature unit PC

Choose a unit for temperature display.

Maximum demand calculation (MD mode) PC

The instrument provides maximum demand values using thermal function. A thermal function assures exponent thermal characteristic based on simulation of bimetal meters. Maximal values are stored in device. A time constant (t. c.) can be set from 1 to 255 minutes and is 6 – time thermal time constant (t. c. = 6 * thermal time constant).

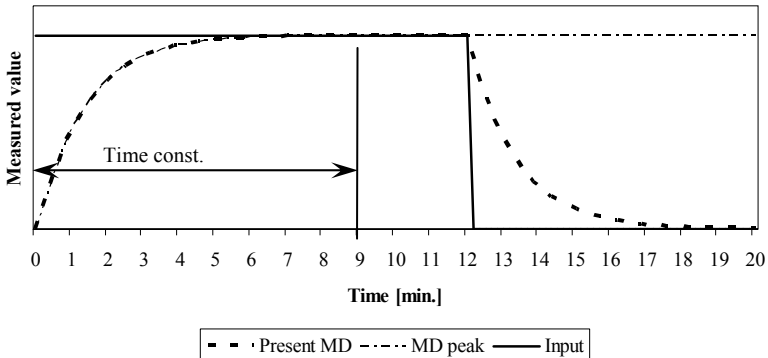
Example:

Mode: Thermal function

Time constant: 8 min.

Current MD and maximal MD: Reset at 0 min.

Thermal function



Starting current for PF and PA (mA) PC

At all measuring inputs noise is usually present. It is constant and its influence on the accuracy is increased by decreasing measuring signals. It is present also when measuring signals are not connected and it occurs at all further calculations as very sporadic measurements. By setting a common starting current, a limit of input signal is defined where measurements and all other calculations are still performed.

Starting current for all powers (mA) PC

Noise is limited with a starting current also at measurements and calculations of powers.

Minimum synchronization voltage PC

If all phase voltages are smaller than this (noise limit) setting, instrument uses current inputs for synchronization. If also all phase currents are smaller than *Starting current for PF and PA* setting, synchronization is not possible and frequency displayed is 0.

Reactive power and energy calculation ^{PC}

Two different principles of reactive power and energy calculation are used:

Standard method:

With this method a reactive power and energy are calculated based on assumption that all power (energy) that is not active is reactive.

$$Q^2 = S^2 - P^2$$

This means also that all higher harmonics will be measured as reactive power (energy).

Delayed current method:

With this method, reactive power (energy) is calculated by multiplication of voltage samples and delayed current samples (see chapter *Equations* on page 53):

$$Q = U \times I|_{+90^\circ}$$

With this method, reactive power (energy) represents only true reactive component of apparent power (energy).

4.5 Connection**Note**

Settings of connections shall reflect actual state otherwise measurements are not valid.

Connection ^{PC}

When connection is selected, load connection and the supported measurements are defined (see chapter Survey of supported measurements regarding *Connection* mode on page 27).

Setting of current and voltage ratios ^{PC}

Before setting current and voltage ratios it is necessary to be familiar with the conditions in which device will be used. All other measurements and calculations depend on these settings. Up to five decimal places can be set.

| Settings range | VT primary | VT secondary | CT primary | CT secondary |
|----------------|------------|--------------|------------|--------------|
| Maximal value | 1638,3 kV | 13383 V | 1638,3 kA | 13383 A |
| Minimal value | 0,1 V | 1 mV | 0,1 A | 1 mA |

Used voltage and current range ^{PC}

Setting of the range is connected with all settings of alarms, analog outputs and a display (calculation) of energy and measurements recording, where 100% represents 500 V 5A. In case of subsequent change of the range, alarms settings shall be correspondingly changed, as well.

Nominal frequency ^{PC}

A valid frequency measurement is within the range of nominal frequency ± 32 Hz. This setting is used for alarms.

Energy flow direction ^{PC}

This setting allows manual change of energy flow direction (IMPORT to EXPORT or vice versa) in readings tab. It has no influence on readings sent to communication.

CT connection ^{PC}

If this setting is set to REVERSED it has the same influence as if CT's would be reversely connected. All power readings will also change its sign.

4.6 Communication

Serial Communication (COM1)

Define parameters (only for COM1) that are important for the operation in RS485 network or connections with PC via RS232 communication. Factory settings of communication are #33\115200,n,8,2 (address 1 to 247\rate 2400 to 115200 b/s, parity, data bits, stop bit).

Modbus table (MI400 or MT500 compatible): With this setting a MODBUS table for measurements and settings is defined. MODBUS addresses for measurements and settings can be compatible with previous family of transducers (MI400) or with more advanced family of transducers (MT500). See *Modbus table* definitions on page 41.

USB Communication


For description of all settings see *Serial Communication (COM1)*. For driver installation see note on page 13. Instrument will establish USB connection with PC approx. 3 seconds after physical connection to USB port.

4.7 Security

Settings parameters are divided into four groups regarding security level:

- 1 At the first level (PL1), settings of a real time clock can be changed, and energy meters and MD can be reset.
- 2 At the second level (PL2), the access to all data that are protected with the first level (PL1) and setting of all other parameters in the »SETTINGS« menu are available.
- 3 A backup password (BP) is used if passwords at levels 1 (PL1) and 2 (PL2) have been forgotten, and it is different for each device (depending on a serial number of the meter). The BP password is available in the user support department in ISKRA MIS, and is entered instead of the password PL1 or/and PL2. Do not forget to state the meter serial meter when contacting the personnel in Iskra MIS.

User information



A serial number of device is stated on the label and also accessible with MiQen software.

Password setting

A password consists of four letters taken from the British alphabet from A to Z. When setting a password, only the letter being set is visible while the others are covered with *.

Two passwords (PL1, PL2) and the time of automatic activation could be set.

Password modification

A password can be modified; however, only that password can be modified to which the access is unlocked at the moment.

Password disabling

A password is disabled by setting the "AAAA" password.


Note



A factory set password is "AAAA" at both access levels (L1 and L2). This password does not limit access.

4.8 Energy

Warning!



After modification of energy parameters, the energy meters must be reset otherwise all further energy measurements could be incorrect.

Active tariff PC

When active tariff is set, one of the tariffs (up to four) is defined as active.

Common energy exponent PC

Common energy exponent defines minimal energy that can be displayed on the energy counter. On the basis of this and a counter divider, a basic calculation prefix for energy is defined (-3 is $10^{-3}\text{Wh} = \text{mWh}$, 4 is $10^4\text{Wh} = 10 \text{ kWh}$). A common energy exponent also influences in setting a number of impulses for energy of pulse output or alarm output functioning as an energy meter.

Define common energy exponent as recommended in table below, where counter divider is at default value 10. Values of primary voltage and current determine proper Common energy exponent.

| Current Voltage | 1 A | 5 A | 50 A | 100 A | 1000 A |
|--------------------|-----|-----|------|-------|--------|
| 110 V | -1 | 0 | 1 | 1 | 2 |
| 230 V | 0 | 0 | 1 | 2 | 3 |
| 1000 V | 0 | 1 | 2 | 3 | 4 |
| 30 kV | 2 | 2 | 3 | 4 | 4* |

* – Counter divider should be at least 100

Counter divider PC

The counter divider additionally defines precision of a certain counter, according to settings of common energy exponent.

An example for 12.345kWh of consumed active energy:


| | | | |
|------------------------------|------------|----------|----------|
| Common energy exponent | 0 | 2 | 2 |
| Counter divider | 1 | 1 | 100 |
| Example of result, displayed | 12.345 kWh | 12.3 kWh | 0.01 MWh |

4.9 Inputs and outputs

Module settings depend on built-in modules.

Analog output module PC

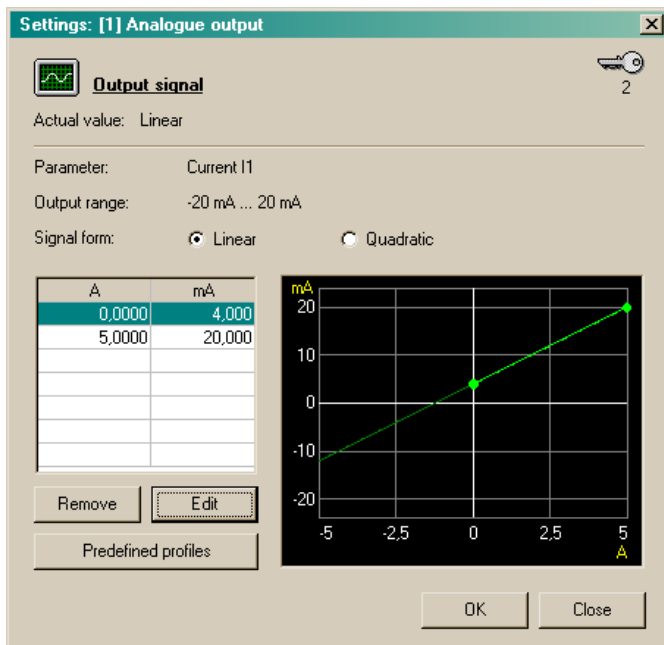Each of up to four analog outputs is fully programmable and can be set to any of 6 full-scale ranges. Within each of those 6 ranges, other required output ranges can be set. For example, $4 \dots 20 \text{ mA}$ range can be set when $\pm 20 \text{ mA}$ full-scale range is selected:



Output parameter

Set the measured parameter to be transformed onto the analog output.

Output range

Defines analog output full-scale ranges:


| DC current output | DC voltage output |
|---------------------|--------------------|
| -1 ... 0 ... 1 mA | -1 ... 0 ... 1 V |
| -5 ... 0 ... 5 mA | |
| -10 ... 0 ... 10 mA | -10 ... 0 ... 10 V |
| -20 ... 0 ... 20 mA | |

Output range

Defines the shape and up to 5 break points of an analog output. For intrinsic-error for analog outputs with bent or linear zoom characteristic multiply accuracy class with correction factor (c). Correction factor c (the highest value applies):

| Linear characteristic | Bent characteristic |
|---|---|
| $c = \frac{1 - \frac{y_0}{y_e}}{1 - \frac{x_0}{x_e}} \quad \text{or} \quad c = 1$ | $x_{b-1} \leq x \leq x_b \quad b - \text{number of break points (1 to 5)}$ |
| | $c = \frac{y_b - y_{b-1}}{x_b - x_{b-1}} \cdot \frac{x_e}{y_e} \quad \text{or} \quad c = 1$ |

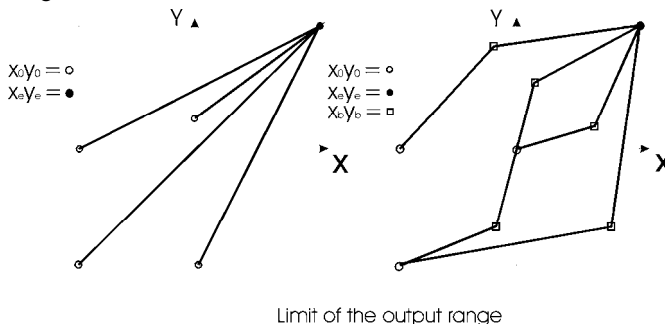Example of settings with linear and bent characteristic:

**Average interval for analog output**

Defines the average interval for measurements on the analog output. Available settings are from 1 period (0.02 sec by 50 Hz) up to 128 periods (2.56 sec by 50 Hz).

Fast analog output module PC

Functionality of fast analog output module is the same as with standard analog output module.

The only difference is its faster response time (≤ 60 ms), and consequential higher ripple. For a proper behavior of fast analog output module (fast response), average interval shall be set to minimum (1 periode).

Solid state output module PC

See Relay output module.


Relay output module PC

Relay output module as well as Solid state output module can be assigned different functions.

- Alarm notification functionality (alarm output)
- Pulse output for energy measurement (pulse output)
- General purpose digital output (digital output)

Pulse output functionality [PC](#)

A corresponding energy counter (up to 4) can be assigned to a pulse output. A number of pulses per energy unit, pulse length, and a tariff in which output is active are set.

Warning!

Pulse parameters are defined by SIST EN 62053–31 standard. In sub-chapter *Calculation of recommended pulse parameters* below a simplified rule is described to assist you in setting the pulse output parameters.

Calculation of recommended pulse parameters:

Number of pulses per energy unit should be in certain limits according to expected power. If not so the measurement from pulse output can be incorrect. Settings of current and voltage transformers can help in estimation of expected power.

Principle described below for pulse setting, where e is prefix, satisfies SIST EN 62053–31: 2001 standards pulse specifications:

$$1,5 \dots 15 \text{ eW} \rightarrow 100 \text{ p/1 eWh}$$

Examples:

| Expected power | → | Pulse output settings |
|----------------|---|-----------------------|
| 150 – 1500 kW | → | 1 p/1 kWh |
| 1,5 – 15 MW | → | 100 p/1 MWh |
| 15 – 150 MW | → | 10 p/1 MWh |
| 150 – 1500 MW | → | 1 p/1 MWh |

Alarm notification functionality [PC](#)

An alarm notification function can also be assigned to output. In case of any alarm occurrence, alarm output will trigger passive electromechanical relay or passive solid-state relay.

Two parameters should be defined for each alarm output:

- The source for assigned alarm (alarm group 1, 2 or both)
- Type of output signal when alarm is detected.

General purpose digital output [PC](#)

This functionality allows user to enable / disable output relay (el.mech. or solid-state) by software settings (when appropriate values are set in MODBUS table).

| MODULE NUMBER | MODBUS REGISTER | REGISTER VALUE | |
|-------------------------|-----------------|----------------|---------|
| Module 1 (if installed) | 40722 | 3 - ON | 4 - OFF |
| Module 2 (if installed) | 40725 | 3 - ON | 4 - OFF |
| Module 3 (if installed) | 40728 | 3 - ON | 4 - OFF |
| Module 4 (if installed) | 40731 | 3 - ON | 4 - OFF |

4.10 Alarms

Alarms are used for alarming exceeded set values of the measured quantities.


Alarms setting [PC](#)

MT440 supports setting up to 16 alarms in two alarm groups. Alarms can be set for any of measured parameters by setting condition and a limit value.

A time constant of maximum demand values in a thermal mode, a delay time and switch-off hysteresis are defined for each group of alarms.

To each of two alarm groups an alarm output (solid-state or electromechanical relay) can be dedicated.

Warning!



New values of alarms are calculated in percentage at modification of connection settings. If Used voltage, current range is changed, limit values of alarms will change proportionally.

4.11 Reset operations

Reset energy counters (E1, E2, E3, E4) [PC](#)

All or individual energy meters are reset.

Reset MD values [PC](#)

Current and stored MDs are reset.

Reset the last MD period [PC](#)

Current MD value is reset.

Reset alarm output [PC](#)

All alarms are reset.

5. MEASUREMENTS

| | |
|--|----|
| 5.1 Introduction | 27 |
| 5.2 Supported measurements | 27 |
| 5.3 Available connections | 27 |
| Survey of supported measurements regarding connection mode | 27 |
| 5.4 Explanation of basic concepts | 29 |
| Sample factor – M_V | 29 |
| Average interval – M_P | 29 |
| Power and energy flow | 29 |
| 5.5 Calculation and display of measurements | 30 |
| 5.6 Present values | 30 |
| Voltage \overline{PC} | 30 |
| Current \overline{PC} | 30 |
| Active, reactive and apparent power \overline{PC} | 30 |
| Power factor and power angle \overline{PC} | 31 |
| Frequency \overline{PC} | 31 |
| Energy \overline{PC} | 31 |
| MD values \overline{PC} | 31 |
| THD – Total harmonic distortion \overline{PC} | 31 |

5.1 Introduction

In the following chapters the device operation is explained more in detail.

5.2 Supported measurements


Selection of supported measurements is changed with the connection settings. All supported measurements could be read via communication (MiQen).

5.3 Available connections

Different electric connections are described more in detail in chapter Electric connection on page 10. Connections are marked as follows:

- Connection 1b (1W) – Single phase connection
- Connection 3b (1W3) – Three-phase – three-wire connection with balanced load
- Connection 4b (1W4) – Three-phase – four-wire connection with balanced load
- Connection 3u (2W3) – Three-phase – three-wire connection with unbalanced load
- Connection 4u (3W4) – Tree-phase – four-wire connection with unbalanced load

Note



Measurements support depends on connection mode the instrument type.
Calculated measurements are only informative.

Survey of supported measurements regarding connection mode

| | Basic measurements | Designat. | Unit | 1b | 3b | 3u | 4b | 4u |
|----------------------------|----------------------------|--------------|------|----|----|----|----|----|
| Phase | Voltage U_1 | U1 | V | ● | × | × | ● | ● |
| | Voltage U_2 | U2 | V | × | × | × | ○ | ● |
| | Voltage U_3 | U3 | V | × | × | × | ○ | ● |
| | Average voltage U^{\sim} | U_{Δ} | V | × | × | × | ○ | ● |
| | Current I_1 | I1 | A | ● | ● | ● | ● | ● |
| | Current I_2 | I2 | A | × | ○ | ● | ○ | ● |
| | Current I_3 | I3 | A | × | ○ | ● | ○ | ● |
| | Current I_n | Inc | A | × | ○ | ○ | ○ | ● |
| | Total current I_t | I | A | ● | ○ | ○ | ○ | ● |
| | Average current I_a | Iavg | A | × | ○ | ○ | ○ | ● |
| | Active power P_1 | P1 | W | ● | × | × | ● | ● |
| | Active power P_2 | P2 | W | × | × | × | ○ | ● |
| | Active power P_3 | P3 | W | × | × | × | ○ | ● |
| | Total active power P_t | P | W | ● | ● | ● | ○ | ● |
| | Reactive power Q_1 | Q1 | var | ● | × | × | ● | ● |
| | Reactive power Q_2 | Q2 | var | × | × | × | ○ | ● |
| Reactive power Q_3 | Q3 | var | × | × | × | ○ | ● | |
| Total reactive power Q_t | Q | var | ● | ● | ● | ○ | ● | |

● – supported

○ – calculated

× – not supported

| | Basic measurements | Designat. | Unit | 1b | 3b | 3u | 4b | 4u |
|-------------------------------|---|----------------|-------------------|----|----|----|----|----|
| Phase | Apparent power S_1 | S1 | VA | ● | × | × | ● | ● |
| | Apparent power S_2 | S2 | VA | × | × | × | ○ | ● |
| | Apparent power S_3 | S3 | VA | × | × | × | ○ | ● |
| | Total apparent power S_t | S | VA | ● | ● | ● | ○ | ● |
| | Power factor PF_1 | PF1/ePF1 | | ● | × | × | ● | ● |
| | Power factor PF_2 | PF2/ePF2 | | × | × | × | ○ | ● |
| | Power factor PF_3 | PF3/ePF3 | | × | × | × | ○ | ● |
| | Total power factor PF^{\sim} | PF/ePF | | ● | ● | ● | ○ | ● |
| | Power angle ϕ_1 | ϕ_1 | ° | ● | × | × | ● | ● |
| | Power angle ϕ_2 | ϕ_2 | ° | × | × | × | ○ | ● |
| | Power angle ϕ_3 | ϕ_3 | ° | × | × | × | ○ | ● |
| | Total power angle ϕ^{\sim} | ϕ | ° | ● | ● | ● | ○ | ● |
| | THD of phase voltage U_{f1} | U1% | %THD | ● | × | × | ● | ● |
| | THD of phase voltage U_{f2} | U2% | %THD | × | × | × | ○ | ● |
| THD of phase voltage U_{f3} | U3% | %THD | × | × | × | ○ | ● | |
| THD of phase current I_1 | I1% | %THD | ● | ● | ● | ● | ● | |
| THD of phase current I_2 | I2% | %THD | × | ○ | ● | ○ | ● | |
| THD of phase current I_3 | I3% | %THD | × | ○ | ● | ○ | ● | |
| Phase-to-phase | Phase-to-phase voltage U_{12} | U12 | V | × | ● | ● | ○ | ● |
| | Phase-to-phase voltage U_{23} | U23 | V | × | ● | ● | ○ | ● |
| | Phase-to-phase voltage U_{31} | U31 | V | × | ● | ● | ○ | ● |
| | Average phase-to-phase voltage (U_{ff}) | U_{Δ} | V | × | ● | ● | ○ | ● |
| | Phase-to-phase angle ϕ_{12} | ϕ_{12} | ° | × | × | × | ○ | ● |
| | Phase-to-phase angle ϕ_{23} | ϕ_{23} | ° | × | × | × | ○ | ● |
| | Phase-to-phase angle ϕ_{31} | ϕ_{31} | ° | × | × | × | ○ | ● |
| | THD of phase-to-phase voltage U_{12} | U12% | %THD | × | ● | ● | ○ | ● |
| | THD of phase-to-phase voltage U_{23} | U23% | %THD | × | ● | ● | ○ | ● |
| | THD of phase-to-phase voltage U_{31} | U31% | %THD | × | ● | ● | ○ | ● |
| Energy | Counters 1–4 | E1, E2, E3, E4 | Wh VAh varh | ● | ● | ● | ● | ● |
| | Active tariff | Atar | | ● | ● | ● | ● | ● |
| | | | | | | | | |
| Max. values MD | MD current I_1 | I1 | A | ● | ● | ● | ● | ● |
| | MD current I_2 | I2 | A | × | ○ | ● | ○ | ● |
| | MD current I_3 | I3 | A | × | ○ | ● | ○ | ● |
| | MD active power P (positive) | P+ | W | ● | ● | ● | ● | ● |
| | MD active power P (negative) | P– | W | ● | ● | ● | ● | ● |
| | MD reactive power Q–L | Q_{L} | var | ● | ● | ● | ● | ● |
| | MD reactive power Q–C | Q_{C} | var | ● | ● | ● | ● | ● |
| MD apparent power S | S | VA | ● | ● | ● | ● | ● | |

● – supported

○ – calculated

×

Note



For 3b and 3u connection mode, only phase to phase voltages are measured. Because of that factor $\sqrt{3}$ is applied to calculation of quality considering nominal phase voltage.

For 4u connection mode measurements support is same as for 1b.

5.4 Explanation of basic concepts

Sample factor – M_V

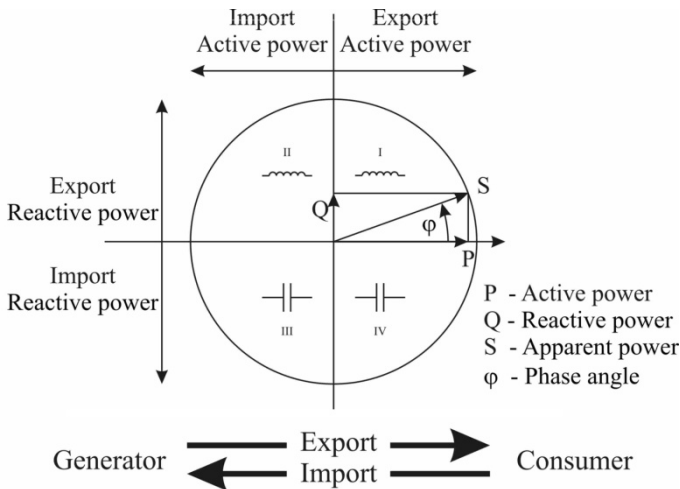
A meter measures all primary quantities with sample frequency which cannot exceed a certain number of samples in a time period. Based on these limitations (65Hz:128 samples) a sample factor is calculated. A sample factor (M_V), depending on frequency of a measured signal, defines a number of periods for a measurement calculation and thus a number of harmonics considered in THD calculations.

Average interval – M_P

Due to readability of measurements from communication, an Average interval (M_P) is calculated with regard to the measured signal frequency. The Average interval (see chapter *Average interval* on page 18) defines refresh rate of displayed measurements based on a sampling factor.

Power and energy flow

Figures below show a flow of active power, reactive power and energy for 4u connection.



5.5 Calculation and display of measurements

This chapter deals with capture, calculation and display of all supported quantities of measurement. Only the most important equations are described; however, all of them are shown in chapter *Equations* on page 53 with additional descriptions and explanations.

Note



Calculation and display of measurements depend on used connection. For more detailed information see chapters Survey of supported measurements regarding *Connection* mode on page 27.

5.6 Present values

All values are calculated as an average of number of periods set in General settings/average interval.

Voltage PC

Instrument measures true RMS values of all phase voltages (U1, U2, U3), connected to the meter. Phase-to-phase voltages (U12, U23, U31), average phase voltage (Uf) and average phase-to-phase voltage (Ua) are calculated from measured phase voltages (U1, U2, U3).

$$U_f = \sqrt{\frac{\sum_{n=1}^N u_n^2}{N}} \quad U_{xy} = \sqrt{\frac{\sum_{n=1}^N (u_{xn} - u_{yn})^2}{N}}$$

All voltage measurements are available via communication.

Current PC

Instrument measures true RMS values of phase currents, connected to current inputs. Neutral current (I_n), average current (I_a) and a sum of all phase currents (I_t) are calculated from phase currents.

$$I_{RMS} = \sqrt{\frac{\sum_{n=1}^N i_n^2}{N}}$$

All current measurements are available via communication.

Active, reactive and apparent power PC

Active power is calculated from instantaneous phase voltages and currents.

Two different principles of reactive power calculation are used:

Standard method:

With this method a reactive power is calculated based on assumption that all power that is not active is reactive.

$$Q^2 = S^2 - P^2$$

This means also that all higher harmonics will be measured as reactive power.

Delayed current method:

With this method, reactive power (energy) is calculated by multiplication of voltage samples and delayed current samples (see chapter *Equations* on page 53):

$$Q = U \times I|_{+90^\circ}$$

With this method, reactive power (energy) represents only true reactive component of apparent power (energy).



All measurements are seen via communication. For more detailed information about calculation see chapter *Equations* on page 53.

Power factor and power angle PC

Power factor is calculated as quotient of active and apparent power for each phase separately ($\cos\varphi_1, \cos\varphi_2, \cos\varphi_3$) and total power angle ($\cos\varphi_t$). For correct display of PF via analog output and application of the alarm, ePF (extended power factor) is applied. It illustrates power factor with one value as described in the table below. For a display on the remote display both of them have equal display function: between -1 and -1 with the icon for inductive or capacitive load.

| Load | C | → | | ← | L |
|-----------|------|-----|---|-----|---------------|
| Angle [°] | -180 | -90 | 0 | +90 | +180 (179.99) |
| PF | -1 | 0 | 1 | 0 | -1 |
| ePF | -1 | 0 | 1 | 2 | 3 |

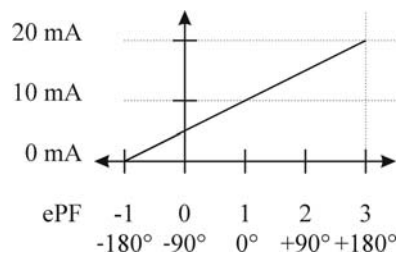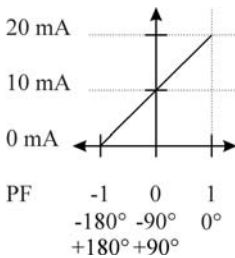Example of analog output for PF and ePF:



Power angle represents angle between first voltage harmonic and first current harmonic for each individual phase. Total power angle is calculated from total active and reactive power (see equation for Total power angle, chapter *Equations* on page 53). A positive sign shows inductive load, and a negative sign shows capacitive load.

Frequency PC

Network frequency is calculated from time periods of measured voltage. Frequency is an average of number of periods set in General settings/average interval.

Energy PC

Energy of each of four energy counters is available.

MD values PC

Measurements of MD values.

THD – Total harmonic distortion PC

THD is calculated for phase currents, phase and phase-to-phase voltages and is expressed as percent of high harmonic components regarding RMS value or relative to first harmonic.

Instrument uses measuring technique of true RMS values that assures exact measurements with the presence of high harmonics up to 31st harmonic.

6. TECHNICAL DATA

| | |
|--|----|
| 6.1 Applied standards ----- | 33 |
| 6.2 Accuracy----- | 34 |
| 6.3 Inputs ----- | 35 |
| Voltage input..... | 35 |
| Current input..... | 35 |
| Frequency..... | 35 |
| Power supply | 35 |
| 6.4 Connection ----- | 35 |
| Permitted conductor cross-sections | 35 |
| 6.5 I/O modules ----- | 36 |
| Electromechanical..... | 36 |
| relay..... | 36 |
| output module | 36 |
| Solid-state | 36 |
| relay..... | 36 |
| output module | 36 |
| Analog output | 36 |
| 6.6 Communication----- | 37 |
| 6.7 Electronic features ----- | 37 |
| Response time | 37 |
| Status LED's | 37 |
| 6.8 Safety features ----- | 37 |
| Protection..... | 37 |
| 6.9 Mechanical----- | 38 |
| 6.10 Environmental conditions ----- | 38 |
| 6.11 Dimensions ----- | 38 |

6.1 Applied standards

EN 61010-1: 2001, Safety requirements for electrical equipment for measurement, control and laboratory use Part 1: General requirements

EN 60688:1992 Electrical measuring transducers for converting a.c. electrical quantities to analogue or digital signals

EN 60688:1995 / A1: 1999 Electrical measuring transducers for converting a.c. electrical quantities to analogue or digital signals

EN 60688:1995 / A2: 2001 Electrical measuring transducers for converting a.c. electrical quantities to analogue or digital signals

EN 61326-1:2006, EMC requirements for electrical equipment for measurement, control and laboratory use - Part 1: General requirements

6.2 Accuracy

Total accuracy (measurements and analog output) according to IEC/EN 60 688 is presented as percentage of range except when it is stated as an absolute value.

| Measured values | Range | | Accuracy class |
|--|--|------------------------------------|-----------------------|
| Rms current ($I_1, I_2, I_3, I_{avg}, I_n$) | Auto (1, 5, 10 A) | | 0.3 (0.2)* |
| Maximum current | 12.5 A | | 0.3 (0.2)* |
| Rms phase voltage (U_1, U_2, U_3, U_{avg}) | Auto (62.5, 125, 250, 500 V _{L-N}) | | 0.3 (0.2)* |
| Maximum voltage | 600 V _{L-N} | | 0.3 (0.2)* |
| Rms phase-to-phase voltage ($U_{12}, U_{23}, U_{31}, U_{avg}$) | 800 V _{L-L} | | 0.3 (0.2)* |
| Frequency (f) – actual | 50 / 60Hz | | 10 mHz (2 mHz)* |
| Nominal frequency range | 16 ... 400 Hz | | 10 mHz |
| Power angle (φ) | -180 ... 0 ... 180° | | 0.2° |
| Power factor (PF) | -1 ... 0 ... +1 | | |
| | U = 50 ... 120 % U _n | | 0.5 |
| | I = 2 % ... 20 % I _n | | 0.2 |
| THD | 5...500 V | | 0.5 |
| | 0...400 % | | |
| Active power | 75 120 | 375 600 | 0.5 (0.3)* |
| Reactive power | 250 500 | 1250 2500 | 0.5 (0.3)* |
| Apparent power | [W/var/VA] I _n = 1 A | [W/var/VA] I _n = 5 A | 0.5 (0.3)* |
| Active energy | | | Class 1 (EN 62053-21) |
| Reactive energy | | | Class 2 (EN 62053-23) |

Note



* – Accuracy on communication

6.3 Inputs

| | | |
|----------------------------------|---|--|
| Voltage input | Nominal range values | 62.5, 125, 250, 500 V _{LN} |
| | Nominal voltage(U _N) | 500 V _{LN} |
| | Minimal measurement | 2 V sinusoidal |
| | Frequency range | 50/60, 400 Hz |
| | Max. measured value (cont.) | 600 V _{LN} ; 1000 V _{LL} |
| | Max. allowed value (acc. to IEC/EN 60 688) | 2 × U _N ; 10 s |
| | Consumption | < U ² / 3.3MΩ per phase |
| Input impedance | | 3.3MΩ per phase |
| Current input | Nominal range values | 1, 5, 10 A |
| | Nominal current (I _N) | 5 A |
| | Min. measurement | Settings* from starting current for all powers |
| | Frequency range | 50/60, 400 Hz |
| | Max. measured value | 12.5 A sinusoidal |
| | Max. allowed value (thermal) (acc. to IEC/EN 60 688) | 15 A cont. 20 × I _N ; 5 × 1s |
| | Consumption | < I ² × 0.01Ω per phase |
| Frequency | Nominal frequency (f _N) | 50, 60, 400 Hz |
| | Measuring range | 16 ... 400 Hz** |
| Power supply Universal | Nominal voltage AC | 40 ... 276 V |
| | Nominal frequency | 45 ... 65 Hz |
| | Nominal voltage DC | 24 ... 300 V |
| | Consumption | < 8VA |
| | Power-on transient current | < 20 A; 1 ms |

* Starting current is set by setting software MiQen/settings/general

** For frequency measurement only

6.4 Connection

Permitted conductor cross-sections

| Terminals | Max. conductor cross-sections |
|-----------------------|---------------------------------------|
| Voltage inputs (4) | 2,5 mm ² with pin terminal |
| | 4 mm ² solid wire |
| Current inputs (6) | 2,5 mm ² with pin terminal |
| | 4 mm ² solid wire |
| Supply (2) | 2,5 mm ² with pin terminal |
| | 4 mm ² solid wire |
| Modules & Com (8 + 3) | 2,5 mm ² with pin terminal |
| | 4 mm ² solid wire |


6.5 I/O modules

| | | | |
|--|--|--|----------------------|
| Electromechanical relay output module | Purpose | alarm, pulse, general purpose digital output | |
| | Type | Electromechanical Relay switch | |
| | Rated voltage | 48 V AC/DC (+40% max) | |
| | Max. switching current | 1000 mA | |
| | Contact resistance | ≤ 100 mΩ (100 mA, 24V) | |
| | Pulse (if used as pulse output) | Max. 4000 imp/hour Min. length 100 ms | |
| | Insulation voltage Between coil and contact Between contacts | 4000 VDC 1000 VDC | |
| Solid-state relay output module | Purpose | alarm, pulse, general purpose digital output | |
| | Type | Open collector solid-state switch | |
| | Rated voltage | 40 V AC/DC | |
| | Max. switching current | 30 mA ($R_{ONmax} = 8\Omega$) | |
| | Pulse length (if used as pulse output) | programmable 1 ... 999 ms | |
| Analog output General | Linearization | Linear, Quadratic | |
| | No. of break points | 5 | |
| | Output value limits | ± 120 % of nominal output | |
| | Response time | < 100 ms (standard analog output) ≤ 50 ms (FAST analog output) | |
| | Residual ripple | < 1 % p.p. (standard analog output) < 2 % p.p. (FAST analog output) | |
| | DC Current output | Output range values | -100 ... 0 ... 100 % |
| | | -1 ... 0 ... 1 mA | Range 1 |
| | | -5 ... 0 ... 5 mA | Range 2 |
| | | -10 ... 0 ... 10 mA | Range 3 |
| | | -20 ... 0 ... 20 mA | Range 4 |
| Other ranges | | possible by MiQen software | |
| Burden voltage | 10 V | | |
| External resistance | $RB_{max} = 10 \text{ V} / I_{outN}$ | | |
| DC Voltage output | Output range values | -100 ... 0 ... 100 % | |
| | -1 ... 0 ... 1 V | Range 5 | |
| | -10 ... 0 ... 10 V | Range 6 | |
| | Other ranges | possible by MiQen software | |
| | Burden current | 20 mA | |
| | External resistance | $RB_{min} = U_{outN} / 20 \text{ mA}$ | |

6.6 Communication

| Type | RS232 | RS485 | USB |
|------------------------|---|---------|-----------------------|
| Type of connection | Direct | Network | Direct |
| Max. connection length | 3 m | 1000 m | 3 m |
| Number of bus stations | – | ≤ 32 | – |
| Terminals | Screw terminals | | USB-mini |
| Insulation | Protection class I, 3.3 kV _{ACRMS} 1 min | | basic isolation only! |
| Transfer mode | Asynchronous | | |
| Protocol | MODBUS RTU | | |
| Transfer rate | 2.400 to 115.200 bit/s | USB 2.0 | |

Warning!



USB communication port is provided with only BASIC insulation and can ONLY be used unconnected to aux. supply AND power inputs!

6.7 Electronic features

| | |
|---|---|
| Response time Input → communication | All calculations are averaged over an interval of between 8 to 256 periods. Preset interval is 64 periods, which is 1.28 second at 50 Hz. |
| Status LED's PWR | Red Instrument power ON |

6.8 Safety features

| | |
|-------------------------------------|--|
| Protection | Protection class II |
| Pollution degree | 2 |
| Installation category | CAT III; 600 V meas. Inputs Acc. to EN 61010-1 CAT III; 300 V aux. supply Acc. to EN 61010-1 |
| Test voltages Acc. to EN 61010-1 | UAUX↔I/O, COM: 3320 VACrms UAUX↔U, I inputs: 3320 VACrms U, I in↔I/O, COM: 3320 VACrms U in↔I in: 3320 VACrms |
| EMC | Directive on electromagnetic compatibility 2004/108/EC Acc. to EN 61326-1 |
| Enclosure material | PC/ABS |
| Flammability | Acc. to UL 94 V-0 |
| Weight | 370 g |


6.9 Mechanical

| | |
|--|---|
| Dimensions | W100 × H75 × D105 mm |
| Max. conductor cross section for terminals | 2,5 mm ² with pin terminal 4 mm ² solid wire |
| Vibration withstand | 7g, 3 ... 100 Hz, 1 oct/min 10 cycles in each of three axes |
| Shock withstand | 300g, 8ms pulse 6 shocks in each of three axes |
| Mounting | Rail mounting 35 × 15 mm acc. to DIN EN 50 022 |
| Enclosure material | PC/ABS |
| Flammability | Acc. to UL 94 V-0 |
| Housing protection | IP20 |
| Weight | 370 g |

6.10 Environmental conditions

| | |
|-------------------------|--|
| Ambient temperature | usage group III -10 ... 0 ... 45 ... 55 °C Acc. to IEC/EN 60 688 |
| Operating temperature | -30 to +70 °C |
| Storage temperature | -40 to +70 °C |
| Average annual humidity | ≤ 93% r.h. |
| Altitude | ≤ 2000 m |

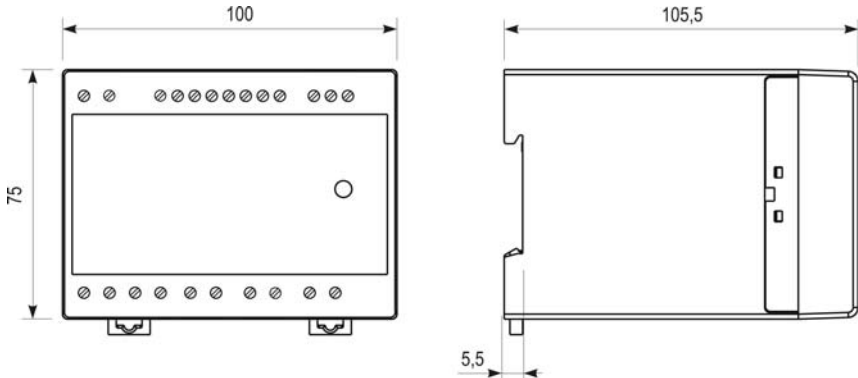6.11 Dimensions



Connection table

| Function | | Connection | |
|-------------------------|---------------|-------------------------|-----|
| Measuring input: | AC current | IL1 | 1/3 |
| | | IL2 | 4/6 |
| | | IL3 | 7/9 |
| | AC voltage | UL1 | 2 |
| | | UL2 | 5 |
| | | UL3 | 8 |
| | | N | 11 |
| | | I/O | |
| Inputs / outputs: | I/O 1 | $\ominus \rightarrow +$ | 15 |
| | | $\ominus \rightarrow -$ | 16 |
| | I/O 2 | $\ominus \rightarrow +$ | 17 |
| | | $\ominus \rightarrow -$ | 18 |
| | I/O 3 | $\ominus \rightarrow +$ | 19 |
| | | $\ominus \rightarrow -$ | 20 |
| | I/O 4 | $\ominus \rightarrow +$ | 21 |
| | | $\ominus \rightarrow -$ | 22 |
| Auxiliary power supply: | | + / AC (L) | 13 |
| | | - / AC (N) | 14 |
| Communication: | RS232 / RS485 | Rx / A | 23 |
| | | GND / NC | 24 |
| | | Tx / B | 25 |

7. APPENDIX A: MODBUS PROTOCOL

7.1 Modbus communication protocol -----41

Modbus 41

VERSION1: 41

Register table for the actual measurements 41

Register table for the normalized actual measurements 43

VERSION2: 45

Register table for the actual measurements 45

Register table for the normalized actual measurements 47

100% values calculations for normalized measurements 48

Data types decoding 49

7.1 Modbus communication protocol

Modbus is enabled via RS232 and RS485 or USB. The response is the same type as the request.

Two versions of MODBUS register tables are available:

- VERSION 1: Compatibility with advanced family of transducers (MT500)
- VERSION 2: Compatibility with previous family of transducers (MI400)

Modbus

Modbus protocol enables operation of device on Modbus networks. For device with serial communication the Modbus protocol enables point to point (for example Device to PC) communication via RS232 communication and multi drop communication via RS485 communication. Modbus protocol is a widely supported open interconnect originally designed by Modicon.

The memory reference for input and holding registers is 30000 and 40000 respectively.

VERSION1:

Register table for the actual measurements

| Parameter | MODBUS | | |
|-------------------------------------|----------|-------|------|
| | Register | | Type |
| | Start | End | |
| Reserved | 30101 | 30104 | |
| Frequency | 30105 | 30106 | T5 |
| U1 | 30107 | 30108 | T5 |
| U2 | 30109 | 30110 | T5 |
| U3 | 30111 | 30112 | T5 |
| Uavg (phase to neutral) | 30113 | 30114 | T5 |
| ϕ 12 (angle between U1 and U2) | 30115 | | T17 |
| ϕ 23 (angle between U2 and U3) | 30116 | | T17 |
| ϕ 31 (angle between U3 and U1) | 30117 | | T17 |
| U12 | 30118 | 30119 | T5 |
| U23 | 30120 | 30121 | T5 |
| U31 | 30122 | 30123 | T5 |
| Uavg (phase to phase) | 30124 | 30125 | T5 |
| I1 | 30126 | 30127 | T5 |
| I2 | 30128 | 30129 | T5 |
| I3 | 30130 | 30131 | T5 |
| INc | 30132 | 30133 | T5 |
| INm - reserved | 30134 | 30135 | T5 |
| Iavg | 30136 | 30137 | T5 |
| Σ I | 30138 | 30139 | T5 |
| Active Power Total (Pt) | 30140 | 30141 | T6 |
| Active Power Phase L1 (P1) | 30142 | 30143 | T6 |
| Active Power Phase L2 (P2) | 30144 | 30145 | T6 |
| Active Power Phase L3 (P3) | 30146 | 30147 | T6 |

| Parameter | MODBUS | | |
|------------------------------------|----------|-------|------|
| | Register | | Type |
| | Start | End | |
| Reactive Power Total (Qt) | 30148 | 30149 | T6 |
| Reactive Power Phase L1 (Q1) | 30150 | 30151 | T6 |
| Reactive Power Phase L2 (Q2) | 30152 | 30153 | T6 |
| Reactive Power Phase L3 (Q3) | 30154 | 30155 | T6 |
| Apparent Power Total (St) | 30156 | 30157 | T5 |
| Apparent Power Phase L1 (S1) | 30158 | 30159 | T5 |
| Apparent Power Phase L2 (S2) | 30160 | 30161 | T5 |
| Apparent Power Phase L3 (S3) | 30162 | 30163 | T5 |
| Power Factor Total (PFt) | 30164 | 30165 | T7 |
| Power Factor Phase 1 (PF1) | 30166 | 30167 | T7 |
| Power Factor Phase 2 (PF2) | 30168 | 30169 | T7 |
| Power Factor Phase 3 (PF3) | 30170 | 30171 | T7 |
| Power Angle Total (atan2(Pt,Qt)) | 30172 | | T17 |
| ϕ 1 (angle between U1 and I1) | 30173 | | T17 |
| ϕ 2 (angle between U2 and I2) | 30174 | | T17 |
| ϕ 3 (angle between U3 and I3) | 30175 | | T17 |
| Internal Temperature | 30181 | | T17 |
| THD HARMONIC DATA | | | |
| U1 THD% | 30182 | | T16 |
| U2 THD% | 30183 | | T16 |
| U3 THD% | 30184 | | T16 |
| U12 THD% | 30185 | | T16 |
| U23 THD% | 30186 | | T16 |
| U31 THD% | 30187 | | T16 |
| I1 THD% | 30188 | | T16 |
| I2 THD% | 30189 | | T16 |
| I3 THD% | 30190 | | T16 |
| I/O STATUS | | | |
| Alarm Status Flags (No. 1 ... 16) | 30191 | | T1 |
| I/O 1 Value | 30193 | | T17 |
| I/O 2 Value | 30194 | | T17 |
| I/O 3 Value | 30195 | | T17 |
| I/O 4 Value | 30196 | | T17 |
| ENERGY | | | |
| Energy Counter 1 Exponent | 30401 | | T2 |
| Energy Counter 2 Exponent | 30402 | | T2 |
| Energy Counter 3 Exponent | 30403 | | T2 |
| Energy Counter 4 Exponent | 30404 | | T2 |
| Current Active Tariff | 30405 | | T1 |
| Energy Counter 1 | 30406 | 30407 | T3 |
| Energy Counter 2 | 30408 | 30409 | T3 |
| Energy Counter 3 | 30410 | 30411 | T3 |
| Energy Counter 4 | 30412 | 30413 | T3 |

Actual counter value is calculated: Counter * 10^{Exponent}

| Parameter | MODBUS | | |
|--------------------------------------|----------|-------|------|
| | Register | | Type |
| | Start | End | |
| DEMAND VALUES | | | |
| DYNAMIC DEMAND VALUES | | | |
| Time Into Period (minutes) | 30501 | | T1 |
| I1 | 30502 | 30503 | T5 |
| I2 | 30504 | 30505 | T5 |
| I3 | 30506 | 30507 | T5 |
| Apparent Power Total (St) | 30508 | 30509 | T5 |
| Active Power Total (Pt) - (positive) | 30510 | 30511 | T6 |
| Active Power Total (Pt) - (negative) | 30512 | 30513 | T6 |
| Reactive Power Total (Qt) - L | 30514 | 30515 | T6 |
| Reactive Power Total (Qt) - C | 30516 | 30517 | T6 |
| MAX DEMAND SINCE LAST RESET | | | |
| I1 | 30518 | 30519 | T5 |
| I2 | 30524 | 30525 | T5 |
| I3 | 30530 | 30531 | T5 |
| Apparent Power Total (St) | 30536 | 30537 | T5 |
| Active Power Total (Pt) - (positive) | 30542 | 30543 | T6 |
| Active Power Total (Pt) - (negative) | 30548 | 30549 | T6 |
| Reactive Power Total (Qt) - L | 30554 | 30555 | T6 |
| Reactive Power Total (Qt) - C | 30560 | 30561 | T6 |

Register table for the normalized actual measurements

| Parameter | MODBUS | | 100% value |
|------------------------------|--------|------|------------|
| | Regist | Type | |
| U1 | 30801 | T16 | Un |
| U2 | 30802 | T16 | Un |
| U3 | 30803 | T16 | Un |
| Uavg (phase to neutral) | 30804 | T16 | Un |
| U12 | 30805 | T16 | Un |
| U23 | 30806 | T16 | Un |
| U31 | 30807 | T16 | Un |
| Uavg (phase to phase) | 30808 | T16 | Un |
| I1 | 30809 | T16 | In |
| I2 | 30810 | T16 | In |
| I3 | 30811 | T16 | In |
| φ I | 30812 | T16 | It |
| I neutral (calculated) | 30813 | T16 | In |
| I neutral (measured) | 30814 | T16 | In |
| Iavg | 30815 | T16 | In |
| Active Power Phase L1 (P1) | 30816 | T17 | Pn |
| Active Power Phase L2 (P2) | 30817 | T17 | Pn |
| Active Power Phase L3 (P3) | 30818 | T17 | Pn |
| Active Power Total (Pt) | 30819 | T17 | Pt |
| Reactive Power Phase L1 (Q1) | 30820 | T17 | Pn |
| Reactive Power Phase L2 (Q2) | 30821 | T17 | Pn |

| Parameter | MODBUS | | 100% value |
|--------------------------------------|----------|------|------------|
| | Register | Type | |
| Reactive Power Phase L3 (Q3) | 30822 | T17 | Pn |
| Reactive Power Total (Qt) | 30823 | T17 | Pt |
| Apparent Power Phase L1 (S1) | 30824 | T16 | Pn |
| Apparent Power Phase L2 (S2) | 30825 | T16 | Pn |
| Apparent Power Phase L3 (S3) | 30826 | T16 | Pn |
| Apparent Power Total (St) | 30827 | T16 | Pt |
| Power Factor Phase 1 (PF1) | 30828 | T17 | 1 |
| Power Factor Phase 2 (PF2) | 30829 | T17 | 1 |
| Power Factor Phase 3 (PF3) | 30830 | T17 | 1 |
| Power Factor Total (PFt) | 30831 | T17 | 1 |
| CAP/IND P. F. Phase 1 (PF1) | 30832 | T17 | 1 |
| CAP/IND P. F. Phase 2 (PF2) | 30833 | T17 | 1 |
| CAP/IND P. F. Phase 3 (PF3) | 30834 | T17 | 1 |
| CAP/IND P. F. Total (PFt) | 30835 | T17 | 1 |
| $\phi 1$ (angle between U1 and I1) | 30836 | T17 | 100° |
| $\phi 2$ (angle between U2 and I2) | 30837 | T17 | 100° |
| $\phi 3$ (angle between U3 and I3) | 30838 | T17 | 100° |
| Power Angle Total (atan2(Pt,Qt)) | 30839 | T17 | 100° |
| $\phi 12$ (angle between U1 and U2) | 30840 | T17 | 100° |
| $\phi 23$ (angle between U2 and U3) | 30841 | T17 | 100° |
| $\phi 31$ (angle between U3 and U1) | 30842 | T17 | 100° |
| Frequency | 30843 | T17 | Fn+10Hz |
| I1 THD% | 30845 | T16 | 100% |
| I2 THD% | 30846 | T16 | 100% |
| I3 THD% | 30847 | T16 | 100% |
| U1 THD% | 30848 | T16 | 100% |
| U2 THD% | 30849 | T16 | 100% |
| U3 THD% | 30850 | T16 | 100% |
| U12 THD% | 30851 | T16 | 100% |
| U23 THD% | 30852 | T16 | 100% |
| U31 THD% | 30853 | T16 | 100% |
| MAX DEMAND SINCE LAST RESET | | | |
| Active Power Total (Pt) - (positive) | 30854 | T16 | Pt |
| Active Power Total (Pt) - (negative) | 30855 | T16 | Pt |
| Reactive Power Total (Qt) - L | 30856 | T16 | Pt |
| Reactive Power Total (Qt) - C | 30857 | T16 | Pt |
| Apparent Power Total (St) | 30858 | T16 | Pt |
| I1 | 30859 | T16 | In |
| I2 | 30860 | T16 | In |
| I3 | 30861 | T16 | In |

| Parameter | MODBUS | | 100% value |
|--------------------------------------|----------|------|--|
| | Register | Type | |
| DYNAMIC DEMAND VALUES | | | |
| Active Power Total (Pt) - (positive) | 30862 | T16 | Pt |
| Active Power Total (Pt) - (negative) | 30863 | T16 | Pt |
| Reactive Power Total (Qt) - L | 30864 | T16 | Pt |
| Reactive Power Total (Qt) - C | 30865 | T16 | Pt |
| Apparent Power Total (St) | 30866 | T16 | Pt |
| I1 | 30867 | T16 | In |
| I2 | 30868 | T16 | In |
| I3 | 30869 | T16 | In |
| ENERGY | | | |
| Energy Counter 1 | 30870 | T17 | Actual counter value MOD 20000 is returned |
| Energy Counter 2 | 30871 | T17 | |
| Energy Counter 3 | 30872 | T17 | |
| Energy Counter 4 | 30873 | T17 | |
| Aktiv Tariff | 30879 | T1 | |
| Internal Temperature | 30880 | T17 | 100° |

VERSION2:**Register table for the actual measurements**

| Parameter | MODBUS | | |
|--|----------|-------|------|
| | Register | | Type |
| | Start | End | |
| Frequency | 30049 | 30050 | T5 |
| U1 | 30057 | 30058 | T5 |
| U2 | 30059 | 30060 | T5 |
| U3 | 30061 | 30062 | T5 |
| Uavg (phase to neutral) | 30063 | 30064 | T5 |
| φ 12 (angle between U1 and U2) | 30065 | | T17 |
| φ 23 (angle between U2 and U3) | 30066 | | T17 |
| φ 31 (angle between U3 and U1) | 30067 | | T17 |
| U12 | 30068 | 30069 | T5 |
| U23 | 30070 | 30071 | T5 |
| U31 | 30072 | 30073 | T5 |
| Uavg (phase to phase) | 30074 | 30075 | T5 |
| I1 | 30076 | 30077 | T5 |
| I2 | 30078 | 30079 | T5 |
| I3 | 30080 | 30081 | T5 |
| INc | 30082 | 30083 | T5 |
| INm - reserved | 30084 | 30085 | T5 |
| Iavg | 30086 | 30087 | T5 |
| Σ I | 30088 | 30089 | T5 |
| Active Power Total (Pt) | 30090 | 30091 | T6 |
| Active Power Phase L1 (P1) | 30092 | 30093 | T6 |
| Active Power Phase L2 (P2) | 30094 | 30095 | T6 |
| Active Power Phase L3 (P3) | 30096 | 30097 | T6 |

| Parameter | MODBUS | | |
|------------------------------------|----------|-------|------|
| | Register | | Type |
| | Start | End | |
| Reactive Power Total (Qt) | 30098 | 30099 | T6 |
| Reactive Power Phase L1 (Q1) | 30100 | 30101 | T6 |
| Reactive Power Phase L2 (Q2) | 30102 | 30103 | T6 |
| Reactive Power Phase L3 (Q3) | 30104 | 30105 | T6 |
| Apparent Power Total (St) | 30106 | 30107 | T5 |
| Apparent Power Phase L1 (S1) | 30108 | 30109 | T5 |
| Apparent Power Phase L2 (S2) | 30110 | 30111 | T5 |
| Apparent Power Phase L3 (S3) | 30112 | 30113 | T5 |
| Power Factor Total (PFt) | 30114 | 30115 | T7 |
| Power Factor Phase 1 (PF1) | 30116 | 30117 | T7 |
| Power Factor Phase 2 (PF2) | 30118 | 30119 | T7 |
| Power Factor Phase 3 (PF3) | 30120 | 30121 | T7 |
| Power Angle Total (atan2(Pt,Qt)) | 30122 | | T17 |
| ϕ 1 (angle between U1 and I1) | 30123 | | T17 |
| ϕ 2 (angle between U2 and I2) | 30124 | | T17 |
| ϕ 3 (angle between U3 and I3) | 30125 | | T17 |
| Internal Temperature | 30126 | | T17 |
| THD HARMONIC DATA | | | |
| U1 THD% | 30639 | | T16 |
| U2 THD% | 30640 | | T16 |
| U3 THD% | 30641 | | T16 |
| U12 THD% | 30642 | | T16 |
| U23 THD% | 30643 | | T16 |
| U31 THD% | 30644 | | T16 |
| I1 THD% | 30645 | | T16 |
| I2 THD% | 30646 | | T16 |
| I3 THD% | 30647 | | T16 |
| ENERGY | | | |
| Energy Counter 1 Exponent | 30037 | | T2 |
| Energy Counter 2 Exponent | 30038 | | T2 |
| Energy Counter 3 Exponent | 30039 | | T2 |
| Energy Counter 4 Exponent | 30040 | | T2 |
| Current Active Tariff | 30133 | | T1 |
| Energy Counter 1 | 30134 | 30135 | T3 |
| Energy Counter 2 | 30136 | 30137 | T3 |
| Energy Counter 3 | 30138 | 30139 | T3 |
| Energy Counter 4 | 30140 | 30141 | T3 |

Actual counter value is calculated:
Counter * 10^{Exponent}

| Parameter | MODBUS | | |
|--------------------------------------|----------|-------|------|
| | Register | | Type |
| | Start | End | |
| DEMAND VALUES | | | |
| DYNAMIC DEMAND VALUES | | | |
| Time Into Period (minutes) | 30174 | | T1 |
| I1 | 30175 | 30176 | T5 |
| I2 | 30177 | 30178 | T5 |
| I3 | 30179 | 30180 | T5 |
| Apparent Power Total (St) | 30181 | 30182 | T5 |
| Active Power Total (Pt) - (positive) | 30183 | 30184 | T6 |
| Active Power Total (Pt) - (negative) | 30185 | 30186 | T6 |
| Reactive Power Total (Qt) - L | 30187 | 30188 | T6 |
| Reactive Power Total (Qt) - C | 30189 | 30190 | T6 |
| MAX DEMAND SINCE LAST RESET | | | |
| I1 | 30207 | 30208 | T5 |
| I2 | 30213 | 30214 | T5 |
| I3 | 30219 | 30220 | T5 |
| Apparent Power Total (St) | 30225 | 30226 | T5 |
| Active Power Total (Pt) - (positive) | 30231 | 30232 | T6 |
| Active Power Total (Pt) - (negative) | 30237 | 30238 | T6 |
| Reactive Power Total (Qt) - L | 30243 | 30244 | T6 |
| Reactive Power Total (Qt) - C | 30249 | 30250 | T6 |

Register table for the normalized actual measurements

| Parameter | MODBUS | | 100% value |
|------------------------------|----------|------|------------|
| | Register | Type | |
| U1 | 30801 | T16 | Un |
| U2 | 30802 | T16 | Un |
| U3 | 30803 | T16 | Un |
| Uavg (phase to neutral) | 30804 | T16 | Un |
| U12 | 30805 | T16 | Un |
| U23 | 30806 | T16 | Un |
| U31 | 30807 | T16 | Un |
| Uavg (phase to phase) | 30808 | T16 | Un |
| I1 | 30809 | T16 | In |
| I2 | 30810 | T16 | In |
| I3 | 30811 | T16 | In |
| φ I | 30812 | T16 | It |
| I neutral (calculated) | 30813 | T16 | In |
| I neutral (measured) | 30814 | T16 | In |
| Iavg | 30815 | T16 | In |
| Active Power Phase L1 (P1) | 30816 | T17 | Pn |
| Active Power Phase L2 (P2) | 30817 | T17 | Pn |
| Active Power Phase L3 (P3) | 30818 | T17 | Pn |
| Active Power Total (Pt) | 30819 | T17 | Pt |
| Reactive Power Phase L1 (Q1) | 30820 | T17 | Pn |
| Reactive Power Phase L2 (Q2) | 30821 | T17 | Pn |

| Parameter | MODBUS | | 100% value |
|------------------------------|----------|------|------------|
| | Register | Type | |
| Reactive Power Phase L3 (Q3) | 30822 | T17 | Pn |
| Reactive Power Total (Qt) | 30823 | T17 | Pt |
| Apparent Power Phase L1 (S1) | 30824 | T16 | Pn |
| Apparent Power Phase L2 (S2) | 30825 | T16 | Pn |
| Apparent Power Phase L3 (S3) | 30826 | T16 | Pn |
| Apparent Power Total (St) | 30827 | T16 | Pt |
| Power Factor Phase 1 (PF1) | 30828 | T17 | 1 |
| Power Factor Phase 2 (PF2) | 30829 | T17 | 1 |
| Power Factor Phase 3 (PF3) | 30830 | T17 | 1 |
| Power Factor Total (PFt) | 30831 | T17 | 1 |

All other MODBUS registers are a subject to change. For the latest MODBUS register definitions go to ISKRA MIS's web page www.iskra-mis.si

100% values calculations for normalized measurements

| | | |
|------|---------------------------------------|----------------------------------|
| Un = | $(R40147 / R40146) * R30015 * R40149$ | |
| In = | $(R40145 / R40144) * R30017 * R40148$ | |
| Pn = | Un*In | |
| It = | In | Connection Mode: 1b |
| It = | 3*In | Connection Modes: 3b, 4b, 3u, 4u |
| Pt = | Pn | Connection Mode: 1b |
| Pt = | 3*Pn | Connection Modes: 3b, 4b, 3u, 4u |
| Fn = | R40150 | |

| Parameter | MODBUS | | Values / Dependencies |
|---------------------|----------|------|-----------------------|
| | Register | Type | |
| Calibration voltage | 30015 | T4 | mV |
| Calibration current | 30017 | T4 | mA |

Register table for the basic settings

| Register | Content | Type | Ind | Values / Dependencies | Min | Max | P. Level |
|----------|-------------------------|------|-----|--------------------------------|------|--------|----------|
| 40143 | Connection Mode | T1 | 0 | No mode | 1 | 5 | 2 |
| | | | 1 | 1b - Single Phase | | | |
| | | | 2 | 3b - 3 phase 3 wire balanced | | | |
| | | | 3 | 4b - 3 phase 4 wire balanced | | | |
| | | | 4 | 3u - 3 phase 3 wire unbalanced | | | |
| | | | 5 | 4u - 3 phase 4 wire unbalanced | | | |
| 40144 | CT Secondary | T4 | | mA | | | 2 |
| 40145 | CT Primary | T4 | | A/10 | | | 2 |
| 40146 | VT Secondary | T4 | | mV | | | 2 |
| 40147 | VT Primary | T4 | | V/10 | | | 2 |
| 40148 | Current input range (%) | T16 | | 10000 for 100% | 5,00 | 200,00 | 2 |
| 40149 | Voltage input range (%) | T16 | | 10000 for 100% | 2,50 | 100,00 | 2 |
| 40150 | Frequency nominal value | T1 | | Hz | 10 | 1000 | 2 |

EXAMPLE of calculation using MODBUS registers and their data types:

$$\begin{aligned}
 \text{CT Primary} &= \text{R40145 (Type T4)} = 10^2 \times 40 = \mathbf{8028}_{(16)} && \rightarrow \mathbf{4000 \text{ A}/10 = 400\text{A}} \\
 \text{CT Secondary} &= \text{R40144 (Type T4)} = 10^2 \times 50 = \mathbf{8032}_{(16)} && \rightarrow \mathbf{5000 \text{ mA}} \\
 \text{Cal. Current} &= \text{R30017 (Type T4)} = 10^2 \times 50 = \mathbf{8032}_{(16)} && \rightarrow \mathbf{5000 \text{ mA}} \\
 \text{Input range} &= \text{R40148 (Type T16)} = 10000 = \mathbf{2710}_{(16)} && \rightarrow \mathbf{100,00\%}
 \end{aligned}$$

$$\mathbf{In = (R40145 / R40144) * R30017 * R40148 = (400 / 5) * 5\text{A} * 100\% = 400\text{A}}$$

Data types decoding

| Type | Bit mask | Description |
|---------|--|---|
| T1 | | Unsigned Value (16 bit) Example: 12345 = 3039(16) |
| T2 | | Signed Value (16 bit) Example: -12345 = CFC7(16) |
| T3 | | Signed Long Value (32 bit) Example: 123456789 = 075B CD 15(16) |
| T4 | bits # 15...14 bits # 13...00 | Short Unsigned float (16 bit) Decade Exponent(Unsigned 2 bit) Binary Unsigned Value (14 bit) Example: 10000*102 = A710(16) |
| T5 | bits # 31...24 bits # 23...00 | Unsigned Measurement (32 bit) Decade Exponent(Signed 8 bit) Binary Unsigned Value (24 bit) Example: 123456*10-3 = FD01 E240(16) |
| T6 | bits # 31...24 bits # 23...00 | Signed Measurement (32 bit) Decade Exponent (Signed 8 bit) Binary Signed value (24 bit) Example: - 123456*10-3 = FDFE 1DC0(16) |
| T7 | bits # 31...24 bits # 23...16 bits # 15...00 | Power Factor (32 bit) Sign: Import/Export (00/FF) Sign: Inductive/Capacitive (00/FF) Unsigned Value (16 bit), 4 decimal places Example: 0.9876 CAP = 00FF 2694(16) |
| T9 | bits # 31...24 bits # 23...16 bits # 15...08 bits # 07...00 | Time (32 bit) 1/100s 00 - 99 (BCD) Seconds 00 - 59 (BCD) Minutes 00 - 59 (BCD) Hours 00 - 24 (BCD) Example: 15:42:03.75 = 7503 4215(16) |
| T10 | bits # 31...24 bits # 23...16 bits # 15...00 | Date (32 bit) Day of month 01 - 31 (BCD) Month of year 01 - 12 (BCD) Year (unsigned integer) 1998..4095 Example: 10, SEP 2000 = 1009 07D0(16) |
| T16 | | Unsigned Value (16 bit), 2 decimal places Example: 123.45 = 3039(16) |
| T17 | | Signed Value (16 bit), 2 decimal places Example: -123.45 = CFC7(16) |
| T Str4 | | Text: 4 characters (2 characters for 16 bit register) |
| T Str6 | | Text: 6 characters (2 characters for 16 bit register) |
| T Str8 | | Text: 8 characters (2 characters for 16 bit register) |
| T Str16 | | Text: 16 characters (2 characters for 16 bit register) |
| T Str40 | | Text: 40 characters (2 characters for 16 bit register) |

8. APPENDIX B: CALCULATIONS & EQUATIONS

| | |
|------------------------------|----|
| 8.1 Calculations----- | 52 |
| Definitions of symbols | 52 |
| 8.2 Equations----- | 53 |
| Voltage | 53 |
| Current | 53 |
| Power | 54 |
| THD | 55 |
| Energy..... | 55 |

8.1 Calculations

Definitions of symbols

| No | Symbol | Definition |
|----|-------------|--|
| 1 | M_v | Sample factor |
| 2 | M_p | Average interval |
| 3 | U_f | Phase voltage (U_1 , U_2 or U_3) |
| 4 | U_{ff} | Phase-to-phase voltage (U_{12} , U_{23} or U_{31}) |
| 5 | N | Total number of samples in a period |
| 6 | n | Sample number ($0 \leq n \leq N$) |
| 7 | x, y | Phase number (1, 2 or 3) |
| 8 | i_n | Current sample n |
| 9 | u_{fn} | Phase voltage sample n |
| 10 | u_{ffn} | Phase-to-phase voltage sample n |
| 11 | φ_f | Power angle between current and phase voltage f (φ_1 , φ_2 or φ_3) |
| 12 | U_c | Agreed supply voltage |

8.2 Equations

Voltage

$$U_f = \sqrt{\frac{\sum_{n=1}^N u_n^2}{N}}$$

Phase voltage

N – 128 samples in one period (up to 65 Hz)

N – 128 samples in M_v periods (above 65 Hz)

Example: 400 Hz → N = 7

$$U_{xy} = \sqrt{\frac{\sum_{n=1}^N (u_{xn} - u_{yn})^2}{N}}$$

Phase-to-phase voltage

u_x, u_y – phase voltages (U_f)

N – a number of samples in a period

Current

$$I_{RMS} = \sqrt{\frac{\sum_{n=1}^N i_n^2}{N}}$$

Phase current

N – 128 samples in a period (up to 65 Hz)

N – 128 samples in more periods (above 65 Hz)

$$I_n = \sqrt{\frac{\sum_{n=1}^N (i_{1n} + i_{2n} + i_{3n})^2}{N}}$$

Neutral current

i – n sample of phase current (1, 2 or 3)

N = 128 samples in a period (up to 65 Hz)

Power

$$P_f = \frac{1}{N} \cdot \sum_{n=1}^N (u_{f_n} \times i_{f_n})$$

Active power by phases

N – a number of samples in a period
 n – sample number (0 ≤ n ≤ N)
 f – phase designation

$$P_t = P_1 + P_2 + P_3$$

Total active power

t – total power
 1, 2, 3 – phase designation

$$\text{Sign}Q_f(\varphi)$$

$$\varphi \in [0^\circ - 180^\circ] \Rightarrow \text{Sign}Q_f(\varphi) = +1$$

$$\varphi \in [180^\circ - 360^\circ] \Rightarrow \text{Sign}Q_f(\varphi) = -1$$

Reactive power sign

Q_f – reactive power (by phases)
 φ – power angle

$$S_f = U_f \times I_f$$

Apparent power by phases

U_f – phase voltage
 I_f – phase current

$$S_t = S_1 + S_2 + S_3$$

Total apparent power

S_f – apparent power by phases

$$Q_f = \text{Sign}Q_f(\varphi) \times \sqrt{S_f^2 - P_f^2}$$

Reactive power by phases (standard)

S_f – apparent power by phases
 P_f – active power by phases

$$Q_f = \frac{1}{N} \cdot \sum_{n=1}^N (u_{f_n} \times i_{f_{[n+N/4]}})$$

Reactive power by phases (delayed current method)

N – a number of samples in a period
 n – sample number (0 ≤ n ≤ N)
 f – phase designation

$$Q_t = Q_1 + Q_2 + Q_3$$

Total reactive power

Q_f – reactive power by phases

$$\varphi_s = a \tan 2(P_t, Q_t)$$

$$\varphi_s = [-180^\circ, 179,99^\circ]$$

Total power angle

P_t – total active power
 S_t – total apparent power

$$PF = \frac{P}{S}$$

Distortion factor

P – total active power
 S – total apparent power

$$PF_f = \frac{P_f}{S_f}$$

Distortion factor

P_f – phase active power
 S_f – phase apparent power

THD

$$I_f \text{THD}(\%) = \frac{\sqrt{\sum_{n=2}^{63} I_n^2}}{I_1} \cdot 100$$

Current THD

I_1 – value of first harmonic
 n – number of harmonic

$$U_f \text{THD}(\%) = \frac{\sqrt{\sum_{n=2}^{63} U_n^2}}{U_1} \cdot 100$$

Phase voltage THD

U_1 – value of first harmonic
 n – number of harmonic

$$U_{ff} \text{THD}(\%) = \frac{\sqrt{\sum_{n=2}^{63} U_n^2}}{U_1} \cdot 100$$

Phase-to-phase voltage THD

U_1 – value of first harmonic
 n – number of harmonic

Energy

Price in tariff = Price $\cdot 10^{\text{Tariff price exponent}}$

Total exponent of tariff price and energy price in all tariffs

Iskra MIS, d. d.
Ljubljanska cesta 24a
SI-4000 Kranj, Slovenia
Phone: 04 237 21 12
Fax: 04 237 21 29
E-mail: info@iskra-mis.si
www.iskra-mis.si